


HOSHIZAKI

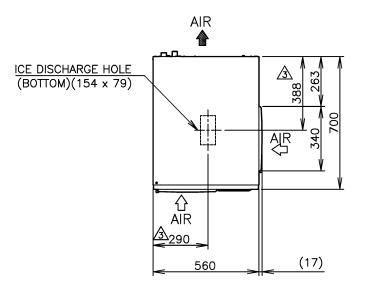

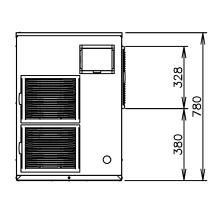

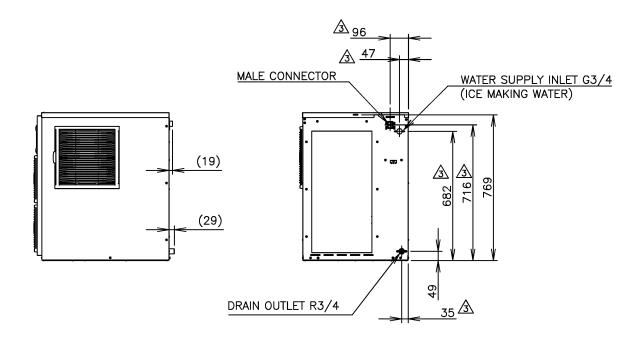

\$\frac{1}{3}\$	ITEM	HOSHIZAKI FLAKE ICE MAKER	
	MODEL	FM-480AKE-HC	
	POWER SUPPLY	1 Phase 220V—240V 50Hz Capacity: 2.2kVA (8.8A)	
	AMPERAGE	5.3A Starting: 27A	
	ELECTRIC CONSUMPTION	1100W (Power Factor: 89.1%)	
	ICE PRODUCTION PER 24h	Approx.450kg (AT. 10°C, WT. 10°C) Approx.400kg (AT. 21°C, WT. 15°C) Approx.340kg (AT. 32°C, WT. 21°C)	
	SHAPE OF ICE	Flake	
	MAX. STORAGE CAPACITY	Not Applicable	
	WATER CONSUMPTION PER 24h	Approx.0.450m³ (AT. 10°C, WT. 10°C) Approx.0.400m³ (AT. 21°C, WT. 15°C) Approx.0.340m³ (AT. 32°C, WT. 21°C)	
	OUTSIDE DIMENSIONS	560(W) x 700(D) x 780mm(H)	
	HEAT REJECTION	2190W (AT.32°C,WT.21°C)	
	CABINET	Stainless Steel, Galvanized Steel (Rear)	
	INSULATION	Urethane Foam	
	INSULATION FOAM BLOWING AGENT	HFC-free	
	ICE MAKING SYSTEM	Thin ice forming inside Cylinder (Flake Ice)	
	WATER SUPPLY SYSTEM	Direct Connection to Water Main, Inlet: G3/4 (Rear)	
	DRAIN SYSTEM	Outlet: R3/4 (Rear)	
	COMPRESSOR	Hermetic	
	CONDENSER	Spiral Tube Type , Air—cooled	
	EVAPORATOR	Tube coiled around Cylinder (Solder Plated)	
	REFRIGERANT	R290/145g	
	BIN CONTROL	Actuator and Reed Switch (Time delay controlled)	
	ICE MAKING WATER CONTROL	Float Switch and Solenoid Valve	
	ELECTRIC CIRCUIT PROTECTION	Circuit Breaker, Earth Wire	
	REFRIGERANT CIRCUIT	Compressor Internal Thermostat (Auto-reset),	
	PROTECTION	Pressure Switch (Auto-reset)	
	MECHANISM PROTECTION	Micro Switch (Manual-reset)	
	ICE MAKER PROTECTION	Shutdown by Microprocessor (Manual-reset)	
	WEIGHT	92kg(Gross: 99kg)	
Ī	PACKAGE	Carton 665(W) x 820(D) x 950mm(H)	
İ	ACCESSORIES	Mounting Bracket, Installation Kit	
	OPERATING CONDITIONS	Ambient Temp.: 5 - 40°C, Water Supply Temp.: 5-35°C Water Supply Pressure: 0.05-0.8MPa(0.5-8bar) Voltage Range: Rated Voltage±6%	
Į,	*We reserve the right t	o make changes in specifications and design without prior notice	
	2 - Francisco and Transfer and		

*We reserve the right to make changes in specifications and design without prior notice

- 1. Install the ice maker properly in accordance with the instructions on location, water supply/drain connections and electrical connections stated in the instruction and installation manuals provided.
- 2. The ice production depends on the ambient and water temperatures. Refer to the instruction manual.
- 3. Product Code: F087